

HS-007 Plus User Guide

Contents

03	HS-007 Plus Basics
04	HS-007 Plus at a glance
05	Using HS-007 Plus controls
06	Recharging the battery
07	HS-007 Plus Accessory
09	Instructions for use
09	To detect the wireless tapping signals
11	Cellphone Locker Mode
12	Guard Mode (Sound /Vibrate Mode)
13	Safety and Handling
15	Preventing the hearing damaged
16	Important handling information

HS-007 Plus Basics


1

Please read this chapter carefully to know about more information about the function and operation on HS-007 Plus.

Use HS-007 Plus to:

- Business negotiation or contract signed.
- Check the suspicious wireless camera in the restaurants, hotels, Toilets, swimming ponds, or dressing rooms, etc.
- Protect confidentiality in military units or government agencies.
- Avoid being photographed in companies, factories, cinema or art galleries, etc.
- Protection for privacy in some private places(such as at home).

HS-007 Plus at a glance

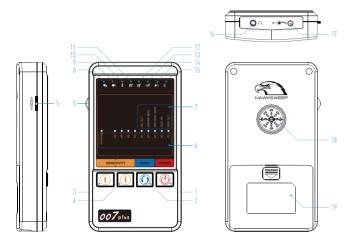

- 1. Power ON/OFF
- 2. Selectable Mode Button
- 3. Increase sensitivity
- 4. Decrease sensitivity
- 5. Multifunction Button.
- 6. Signal strength
- 7. Cellphone Locker frequency
- 8. Silent Mode Light
- 9. Sound Mode Light
- 10. Acounstic Mode Light

- 11. Guard Mode Light
- 12. Vibrate Mode Light
- 13. Cellphone Locker Light
- 14. Charging Light
- 15. Battery Level Light
- 16. Headset Jack
- 17. Charging Connector
- 18. Speaker
- 19. Battery Case.

Using HS-007 Plus controls

Operate the device buttons and enter the desirable modes.

ON/OFF	Keep pressing Power Buttons for 2 seconds	
Increase sensitivity	Press UP	
Decrease sensitivity	Press DOWN	
Silent Mode	Press Mode, the corresponding lights will be on.	* * 1 B, B, W. * 8
Sound Mode	Press Mode, the corresponding lights will be on.	*x * 1 5° 5° 6° 6° 8
Acoustic Mode	Press Mode,the corresponding lights will be on.	ा कि कि कि कि कि कि कि कि
Cellphone Locker Mode	Keep pressing Mode 2 seconds and enter cellphone locker mode.	电水 电
Guard Mode	Press Mode to make the lights on shown as picture.	电水 电 非 医 医 以 多 第
Vibrate Mode	Press Mode to make the lights on shown as picture.	ex en 1 m, m, ex ex s

In Cellphone locker Mode, long pressing Mode button and activate the current operation on the selected frequency band. If you click Mode , the selected band light quick / slow blink , it shows ON/OFF. Select the other bands and repeate the operation, the other bands can be ON/OFF. Long pressing the Mode restore the setting.

Recharging the battery

HS-007 Plus kit comes with a rechargeable battery.

To prolong the battery lifespan, please make a full recharge for the battery for the first time.

It takes around 4 hours to finish the recharging. In case of long time not used, HS-007 Plus need to be recharged.

Take use of AC adapter to recharge for the inside battery.

- 1. Put USB connector to AC adapter.
- 2. Plug the AC adapter into the power outlet.
- 3. Plug DC connector into HS-007 Plus power connector.

Computer USB Connector can also be used to recharge HS-007 Plus.



HS-007 Plus Accessory

HS-007 Plus kit accessoried with one headset and power adapter.

Headset

HS-007 Plus is accessoried with a high quality volume adjustable headset.

Power adapter

HS-007 Plus also comes with a 5V/1A power adapter.

Instructions for use

2

To detect the wireless tapping signals

Silent/Sound/Acoustic Mode

Before the detection, please try to turn off all the wireless equipments(such as wireless router,cellphone and computer,etc) to make sure the indoor signal strength to the minimum level and get a more precise detecting effect, avoid wrong detection or location guiding.

Select the modes (Silent/Sound/Acoustic).

Before the detection, we need to adjust HS-007 Plus sensitivity through UP/Down Button to make sure the signal strength lights is not higher than MINIMUM.

Try to move HS-007 Plus close to the places that are easier to put the tapping and listening device or hidden cameras, such as air vents, Decorative molding, heating radiator, cabinet, electrical

equipment, clocks, watches, flower vase, etc.

Once HS-007 Plus find the radiation equipments, the signal strength lights will be increased accompanied with the increasing radiation level. When the signal strength lights to be the maximum, Press DOWN to lower the signal strength. This will be more accurate to locate the radiation source. Repeat such operation until the signal strength level not changed, double check the position, and finally you can locate the wireless tapping. listening devices, etc.

Acoustic Mode, You can search by the sound.

HS-007 Plus can differentiate the position of signal source by its radiated sounds, so you can detect those innocent and not obvious radiation signals in your local. HS-007 Plus will make the sounds and inform where the signal source is. This mode can also demodulate the acoustic signals. You can identify whether radiation equipments are on by the sound. If more radiation equipments are switched on, you can also discern them.

For Sound Mode and Acoustic Mode, you can use the headset. You just plug the headset into HS-007 Plus the build-in speaker will be closed automatically. Whenever in quiet or noisy environment you can search the radiation source through this headphone.

Please do not make confusion on the headset connector and recharging connectors to avoid the damage of the device.

Cellphone Locker Mode

This mode is generally used to interfere the signals of Standard Network GSM 900/1800 MHz/3G 2100MHz/CMDA 850MHz/LTE4G phones and other radio equipments.

Switch to Cellphone Locker mode

When this mode is activated,HS-007Pro can interfere GSM 900/1800 MHz/3G 2100MHz/CMDA 850MHz/LTE4G signals within 10 meters. Each frequency channel can be operated separately. More flexible to protect our confidence.

Guard Mode (Sound /Vibrate Mode)

This mode is generally used to ensure security during the meeting, confidential information avoid being leaked to third parties.

To select Guard Mode (Sound/Vibrate Mode).

When it is activated, HS-007 Plus will monitor the change of signal strength level. Once the radiation level is beyond the safety range. HS-007 Plus will make sound or vibrate to alarm you.

Safety and Handling

3

This chapter includes some important safety issues and operational information. To avoid damage of HS-007Pro, please read the above carefully.



Warning: Failure to follow up these safety instructions may lead to fire, electric shock or others injury or damage.

Please do not bend, throw, squeeze, puncturing, flaming or even open the case of HS-007 Plus while using.

Avoid putting in water or wet places. Do not use in the raining, near washbasin or others damp places. Please do not spill any food or liquid on the device, if did, please open battery case and take out of the battery immediately, you can restart the device after it is thorougly dried.

To repair HS-007 Plus, do not try to repair it by yourself. This device

does not comes with any components to be repaired by the users. Any repairing information ,please contact the factory or your local distributors.

To recharge HS-007 Plus, please make sure power adapter connect well and then plug into power outlet. Please do not touch the power adapter with wet hands.

Please do not use other brand power adapter to recharge HS-007 Plus, only the supplied one.

It is normal there will be some heat for the power adapter. Please try to be ventilated and operated cautiously.

In case of the any below happened, please pull out this power adapter.

- Power Cable or Plug worn or damaged.
- Exposed to the rain or over damp.
- Its case has been damaged.
- You find the power adapter need repairing, please repair it in time.
- you want to clean the adapter

Preventing the hearing damaged

It may lead to permanent hearing damage if you tune the volume too high while using the headset or headphone.

Hearing experts advice the followed methods to protect your hearing:

- Limit the time to wear headset or headphone under a high volume.
- Avoid tuning high volume to isolate the noisy environment.
- Please tune a low volume if you could not hear others.

Important handling information

Failure to follow up these operational instructions may lead to the device or other properties.

Carry HS-007 Plus HS-007 Plus Contains sensitive components.Do not bend, throw or squeeze.

Never force the connector into the port, check whether the port is blocked. if the connector can not be inserted into the port easily, It means they probably are not matched. Make sure they are matched, and their angle position are corresponding.

Please use HS-007 Plus under the sustainable temperature range around 0° ~35°C(32°to 95°F).

Please put away HS-007 Plus between -20°to 45°C(-4°to 113°F). Do not leave HS-007 Plus in the car.The temperature in the car will exceed this temperature range while it is parking.

It is normal that HS-007 Plus will be hot while you use it or charge it. The case of HS-007 Plus disperse the heat from the device inside automatically.

Please keep HS-007Pro surface clean. Turn off the device before cleaning. Try to use a soft, moist and lint-free cloth to wipe its surface. Avoid getting moisture from the openings. Never use rubbing

painting, household cleaners, chemical spray, solvents, alcohol, ammonia, or abrasives.